


Figure 1

Volume (cubic yards)	0- 25	26- 100	101- 500	501- 1,00 0	1,001 - 2,000	> 2,000
Number of samples	3-4	6-8	8-10	10- 12	13-15	15 + 3 for every addition al 500 cubic yards


Figure 2

Figure 3
Example of in situ
verification soil borings in
the area of known soil
contamination.
Verification Soil Boring ●

↑
N

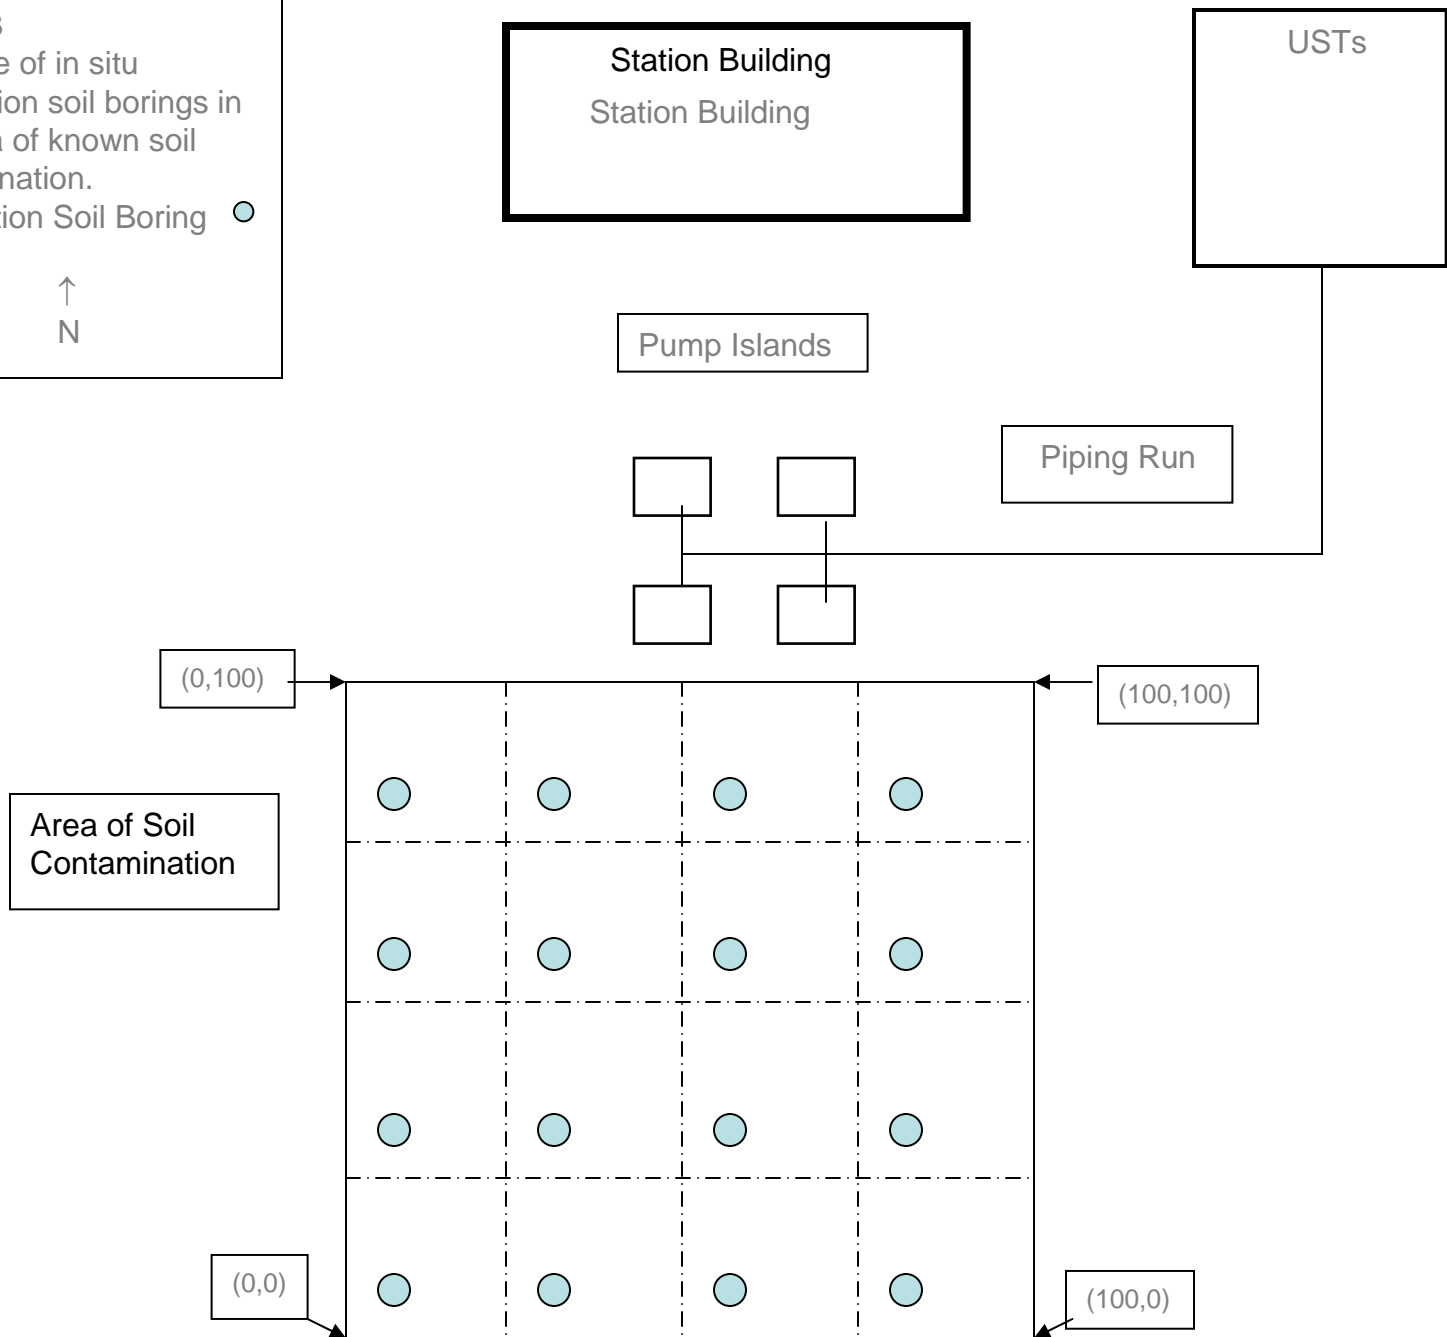

Biased Vertical Sampling Strategies

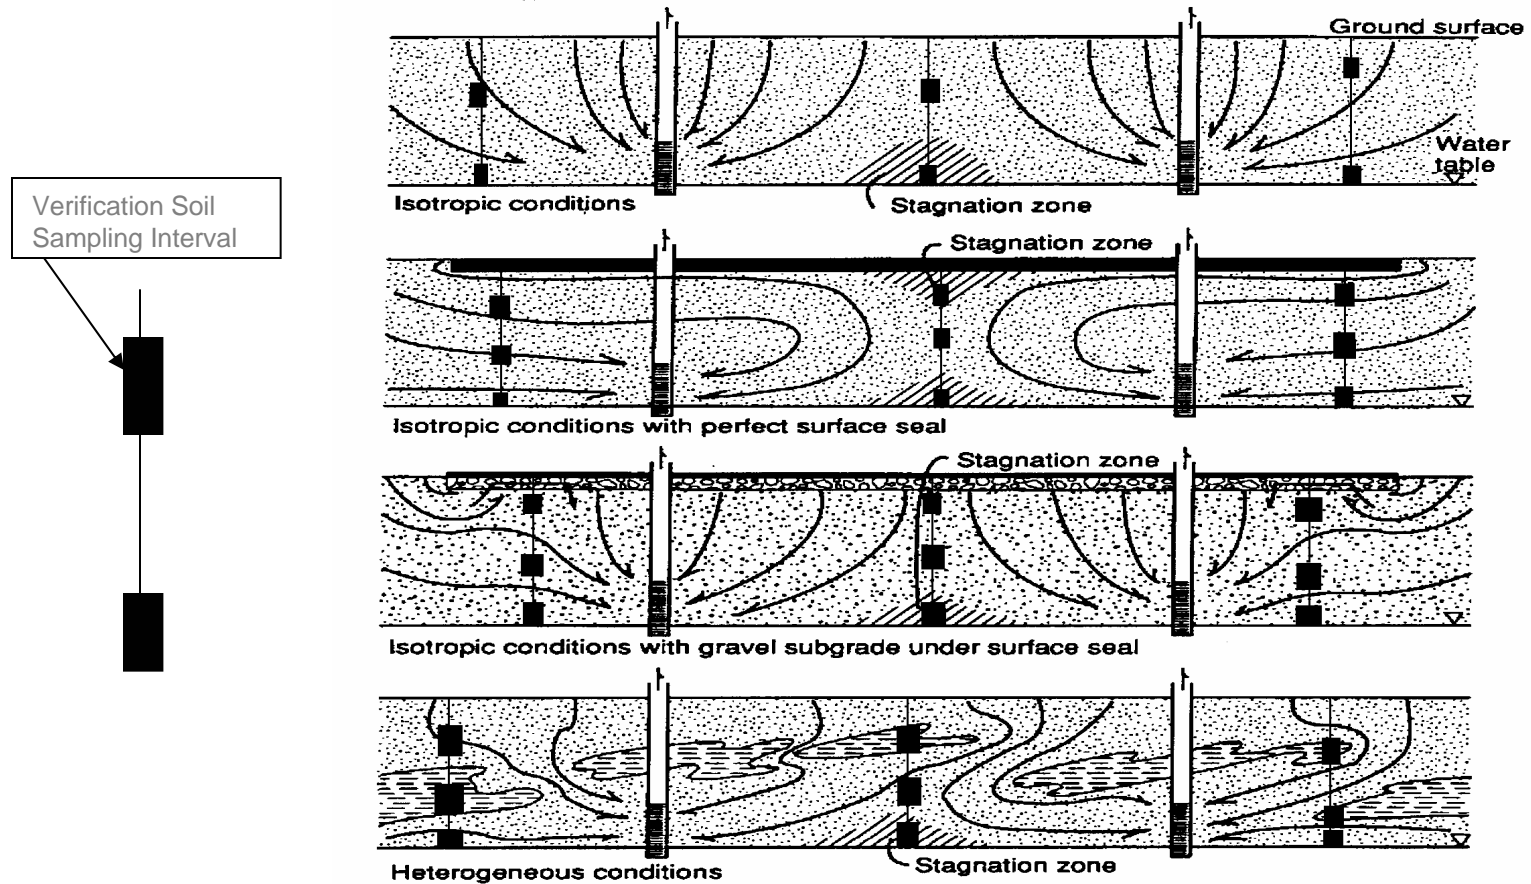

Note: Not to scale, for conceptual discussion purposes only
 Flow is three dimensional. Recharge also occurs in the dimension
 perpendicular to the drawing.

Figure 4

(Revised from WDNR, 1993)